


## Oil grades

ATF approved oil

Refer to MBNA Factory Approved  
Service Products list

## Special tools

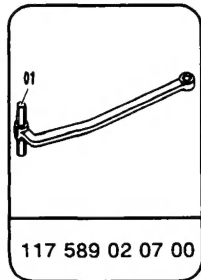

## Commercial tools


14 mm hex. driver insert, 1/2" square drive

obtain locally


**Note:** When performing this job number, the engine compartment lower panel or the noise encapsulation panel must be removed, and replaced after completing all maintenance work (refer to job number 6190 or 9400).

**Warning!** To help prevent risk of injury when opening filler plug on model 201, wear leather gloves; place an extension on wrench; or open filler plug by striking wrench.


- Remove oil filler plug (upper arrow in figure).
- If a minimal amount of oil runs out or if the oil level is at lower edge of opening, oil level is correct.  
If not, add oil.
- Install oil filler plug and torque to max. 60 Nm.
- If oil loss is excessive, determine cause and repair on separate order.

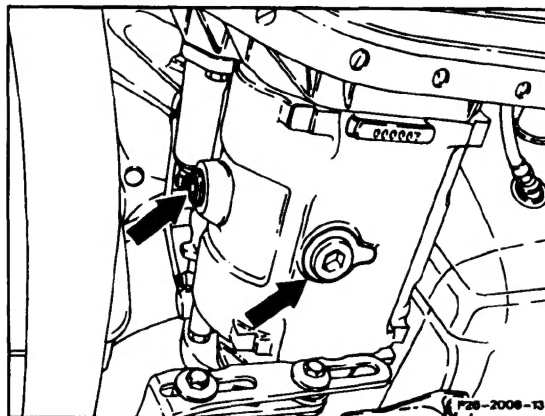


Transmission 716.0

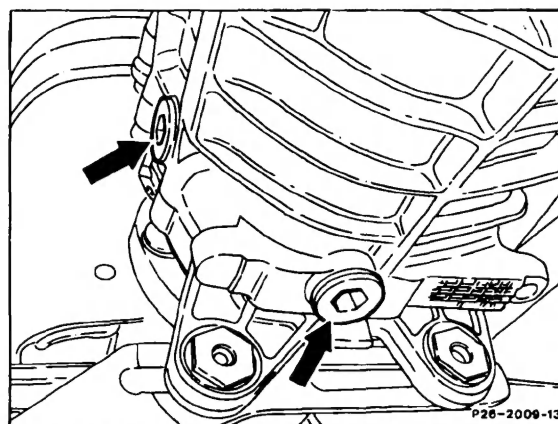

Transmission 716.21

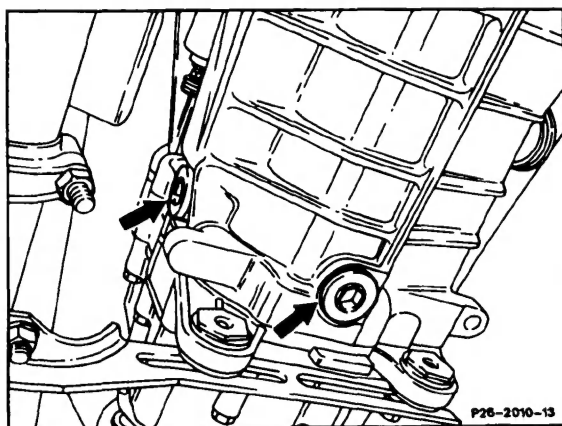

Transmission 717.40

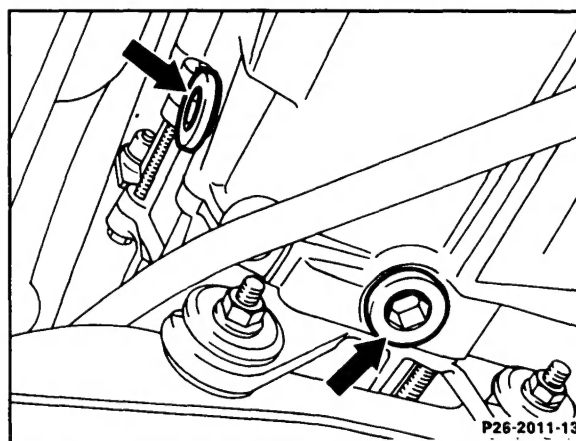

Transmission 717.41, 717.43, 717.45